



NISSAN PATROL

Time: 0.7 Hours



ENGINE MAINTENANCE (Diesel Engine)

- ⚙️ Replace engine oil
- ⚙️ Replace engine oil filter
- ⚙️ Drain fuel filter
- ⚙️ Inspect Cyclone pre-air cleaner

ENGINE MAINTENANCE (Petrol Engine)

- ⚙️ Replace engine oil
- ⚙️ Replace engine oil filter
- ⚙️ Inspect Cyclone pre-air cleaner

CHASSIS AND BODY MAINTENANCE

- ⚙️ Inspect brake, clutch and steering gear fluid or oil
- ⚙️ Inspect brake, clutch and exhaust systems
- ⚙️ Inspect manual transmission gear oil
- ⚙️ Inspect automatic transmission fluid except for TB48DE engine model
- ⚙️ Inspect transfer fluid and differential gear oil
- ⚙️ Inspect steering gear box and linkage, axle and suspension parts, propeller shaft and front drive shafts
- ⚙️ Inspect brake pads, rotors and other brake components
- ⚙️ Lubricate locks, hinges and hood latch (Severe conditions only)
- ⚙️ Inspect foot brake, parking brake and clutch



NISSAN PATROL

Time: 2.4 Hours



ENGINE MAINTENANCE (Diesel Engine)

- ⚙️ Inspect and adjust drive belts
- ⚙️ Adjust intake and exhaust valve clearances
- ⚙️ Replace engine oil
- ⚙️ Replace engine oil filter
- ⚙️ Inspect cooling system
- ⚙️ Drain fuel filter
- ⚙️ Inspect Cyclone pre-air cleaner
- ⚙️ Inspect injection nozzles

ENGINE MAINTENANCE (Petrol Engine)

- ⚙️ Adjust intake and exhaust valve clearances
- ⚙️ Replace engine oil
- ⚙️ Replace engine oil filter
- ⚙️ Inspect cooling system
- ⚙️ Inspect Cyclone pre-air cleaner

CHASSIS AND BODY MAINTENANCE

- ⚙️ Inspect brake, clutch and steering gear fluid or oil
- ⚙️ Replace brake fluid (Severe conditions only)
- ⚙️ Inspect power steering fluid and lines
- ⚙️ Inspect brake, clutch and exhaust systems >>

CHASSIS AND BODY MAINTENANCE

(CONTINUED)

- ⚙️ Inspect manual transmission gear oil
- ⚙️ Inspect automatic transmission fluid except TB48DE engine model
- ⚙️ Inspect transfer fluid and differential gear oil
- ⚙️ Inspect steering gear box and linkage, axle and suspension parts, propeller shaft and front drive shafts
- ⚙️ Inspect steering damper
- ⚙️ Lubricate greasing points of propeller shafts
- ⚙️ Tighten body mountings
- ⚙️ Inspect wheel alignment
- ⚙️ Inspect brake pads, rotors and other brake components
- ⚙️ Inspect brake linings, drums and other brake components
- ⚙️ Inspect front wheel bearing grease
- ⚙️ Inspect free-running hub grease
- ⚙️ Lubricate locks, hinges and hood latch
- ⚙️ Re-grease propeller shaft (4X4) (Severe conditions only)
- ⚙️ Inspect seat belts, buckles, retractors, anchors and adjuster
- ⚙️ Inspect foot brake, parking brake and clutch



NISSAN PATROL

Time: 0.7 Hours



ENGINE MAINTENANCE (Diesel Engine)

- ⌘ Replace engine oil
- ⌘ Replace engine oil filter
- ⌘ Drain fuel filter
- ⌘ Inspect Cyclone pre-air cleaner

ENGINE MAINTENANCE (Petrol Engine)

- ⌘ Replace engine oil
- ⌘ Replace engine oil filter
- ⌘ Inspect Cyclone pre-air cleaner

CHASSIS AND BODY MAINTENANCE

- ⌘ Inspect brake, clutch and steering gear fluids or oil
- ⌘ Inspect brake, clutch and exhaust systems
- ⌘ Inspect manual transmission gear oil
- ⌘ Inspect automatic transmission fluid except for TB48DE engine model
- ⌘ Inspect transfer fluid and differential gear oil
- ⌘ Inspect steering gear box and linkage, axle and suspension parts, propeller shaft and front drive shafts
- ⌘ Inspect brake pads, rotors and other brake components
- ⌘ Lubricate locks, hinges and hood latch (Severe conditions only)
- ⌘ Inspect foot brake, parking brake and clutch



NISSAN PATROL

Time: 3.7 Hours



ENGINE MAINTENANCE (Diesel Engine)

- ⚙️ Inspect and adjust drive belts
- ⚙️ Adjust intake and exhaust valve clearances
- ⚙️ Replace engine oil
- ⚙️ Replace engine oil filter
- ⚙️ Check and correct engine coolant mixture ratio
- ⚙️ Inspect cooling system
- ⚙️ Drain fuel filter
- ⚙️ Inspect fuel lines
- ⚙️ Inspect Cyclone pre-air cleaner
- ⚙️ Inspect injection nozzles (Severe conditions only)

ENGINE MAINTENANCE (Petrol Engine)

- ⚙️ Inspect and adjust drive belts
- ⚙️ Adjust intake and exhaust valve clearances
- ⚙️ Replace engine oil
- ⚙️ Replace engine oil filter
- ⚙️ Check and correct engine coolant mixture ratio
- ⚙️ Inspect cooling system
- ⚙️ Inspect fuel lines
- ⚙️ Inspect Cyclone pre-air cleaner
- ⚙️ Replace spark plugs
- ⚙️ Inspect EVAP vapour lines

(CONTINUED ON NEXT PAGE)



NISSAN PATROL

Continued



CHASSIS AND BODY MAINTENANCE

- Inspect brake, clutch and steering gear fluid or oil
- Replace brake fluid
- Inspect brake booster vacuum hoses, connections and check valve
- Inspect power steering fluid and lines
- Inspect brake, clutch and exhaust systems
- Inspect manual transmission gear oil
- Inspect automatic transmission fluid except TB48DE engine model
- Replace automatic transmission fluid (Severe conditions only)
- Replace transfer fluid and differential (LSD) gear oil
- Inspect steering gear box and linkage, axle and suspension parts, propeller shaft and front drive shafts
- Inspect steering damper >>

CHASSIS AND BODY MAINTENANCE

(CONTINUED)

- Lubricate greasing points of propeller shaft
- Tighten body mountings
- Inspect wheel alignment
- Inspect brake pads, rotors and other brake components
- Inspect brake linings, drums and other brake components
- Replace front wheel bearing grease
- Lubricate axle joint in knuckle flange
- Inspect free-running hub grease
- Lubricate locks, hinges and hood latch
- Inspect seat belts, buckles, retractors, anchors and adjuster
- Inspect foot brake, parking brake and clutch



NISSAN PATROL

Time: 0.8 Hours



ENGINE MAINTENANCE (Diesel Engine)

- ⌘ Replace engine oil
- ⌘ Replace engine oil filter
- ⌘ Replace fuel filter
- ⌘ Replace air cleaner filter
- ⌘ Inspect Cyclone pre-air cleaner

ENGINE MAINTENANCE (Petrol Engine)

- ⌘ Replace engine oil
- ⌘ Replace engine oil filter
- ⌘ Replace fuel filter
- ⌘ Replace air cleaner filter
- ⌘ Inspect Cyclone pre-air cleaner

CHASSIS AND BODY MAINTENANCE

- ⌘ Inspect brake, clutch and steering gear fluid or oil
- ⌘ Inspect brake, clutch and exhaust systems
- ⌘ Inspect manual transmission gear oil
- ⌘ Inspect automatic transmission fluid except TB48DE engine model
- ⌘ Inspect transfer fluid and differential gear oil
- ⌘ Inspect steering gear box and linkage, axle and suspension parts, propeller shaft and front drive shafts
- ⌘ Inspect brake pads, rotors and other brake components
- ⌘ Lubricate locks, hinges and hood latch
- ⌘ Inspect foot brake, parking brake and clutch



NISSAN PATROL

Time: 2.4 Hours



ENGINE MAINTENANCE (Diesel Engine)

- Inspect and adjust drive belts
- Adjust intake and exhaust valve clearances
- Replace engine oil
- Replace engine oil filter
- Inspect cooling system
- Drain fuel filter
- Inspect Cyclone pre-air cleaner
- Inspect injection nozzles (Severe conditions only)

ENGINE MAINTENANCE (Petrol Engine)

- Adjust intake and exhaust valve clearances
- Replace engine oil
- Replace engine oil filter
- Inspect cooling system
- Inspect Cyclone pre-air cleaner

CHASSIS AND BODY MAINTENANCE

- Inspect brake, clutch and steering gear fluid or oil
- Replace brake fluid (Severe conditions only)
- Inspect power steering fluid and lines
- Inspect brake, clutch and exhaust systems >>

CHASSIS AND BODY MAINTENANCE

(CONTINUED)

- Inspect manual transmission gear oil
- Inspect automatic transmission fluid except TB48DE engine model
- Inspect transfer fluid and differential gear oil
- Inspect steering gear box and linkage, axle and suspension parts, propeller shaft and front drive shafts
- Inspect steering damper
- Lubricate greasing points of propeller shafts
- Tighten body mountings
- Inspect wheel alignment
- Inspect brake pads, rotors and other brake components
- Inspect brake linings, drums and other brake components
- Inspect front wheel bearing grease
- Inspect free-running hub grease
- Lubricate locks, hinges and hood latch
- Inspect seat belts, buckles, retractors, anchors and adjuster
- Inspect foot brake, parking brake and clutch



NISSAN PATROL

Time: 0.7 Hours



ENGINE MAINTENANCE (Diesel Engine)

- ⌘ Replace engine oil
- ⌘ Replace engine oil filter (Severe conditions only)
- ⌘ Drain fuel filter
- ⌘ Inspect Cyclone pre-air cleaner

ENGINE MAINTENANCE (Petrol Engine)

- ⌘ Replace engine oil
- ⌘ Replace engine oil filter
- ⌘ Inspect Cyclone pre-air cleaner

CHASSIS AND BODY MAINTENANCE

- ⌘ Inspect brake, clutch and steering gear fluid or oil
- ⌘ Inspect brake, clutch and exhaust systems
- ⌘ Inspect manual transmission gear oil
- ⌘ Inspect automatic transmission fluid except TB48DE engine model
- ⌘ Inspect transfer fluid and differential gear oil
- ⌘ Inspect steering gear box and linkage, axle and suspension parts, propeller shaft and front drive shafts
- ⌘ Inspect brake pads, rotors and other brake components
- ⌘ Lubricate locks, hinges and hood latch (Severe conditions only)
- ⌘ Inspect foot brake, parking brake and clutch



NISSAN PATROL

Time: 3.9 Hours



ENGINE MAINTENANCE (Diesel Engine)

- ⚙️ Inspect and adjust drive belts
- ⚙️ Adjust intake and exhaust valve clearances
- ⚙️ Replace engine oil
- ⚙️ Replace engine oil filter
- ⚙️ Replace engine coolant (Nissan Genuine Engine Coolant)
- ⚙️ Inspect cooling system
- ⚙️ Drain fuel filter
- ⚙️ Inspect fuel lines
- ⚙️ Inspect Cyclone pre-air cleaner
- ⚙️ Inspect injection nozzles (Severe conditions only)

ENGINE MAINTENANCE (Petrol Engine)

- ⚙️ Inspect and adjust drive belts
- ⚙️ Adjust intake and exhaust valve clearances
- ⚙️ Replace engine oil
- ⚙️ Replace engine oil filter
- ⚙️ Replace engine coolant (Nissan Genuine Engine Coolant)
- ⚙️ Inspect cooling system
- ⚙️ Inspect fuel lines
- ⚙️ Inspect Cyclone pre-air cleaner
- ⚙️ Replace spark plugs
- ⚙️ Inspect EVAP vapour lines

(CONTINUED ON NEXT PAGE)



NISSAN PATROL

Continued



CHASSIS AND BODY MAINTENANCE

- ⚡ Inspect brake, clutch fluid and steering gear fluid or oil
- ⚡ Replace brake fluid
- ⚡ Inspect brake booster vacuum hoses, connections and check valve
- ⚡ Inspect power steering fluid and lines
- ⚡ Inspect brake, clutch and exhaust systems
- ⚡ Inspect manual transmission gear oil
- ⚡ Inspect automatic transmission fluid except TB48DE engine model
- ⚡ Replace automatic transmission fluid (Severe conditions only)
- ⚡ Replace transfer fluid and differential (LSD) gear oil
- ⚡ Inspect steering gear box and linkage, axle and suspension parts, propeller shaft and front drive shafts
- ⚡ Lubricate greasing points of propeller shafts >>

CHASSIS AND BODY MAINTENANCE

(CONTINUED)

- ⚡ Tighten body mountings
- ⚡ Inspect wheel alignment
- ⚡ Inspect brake pads, rotors and other brake components
- ⚡ Inspect brake linings, drums and other brake components
- ⚡ Replace front wheel bearing grease
- ⚡ Lubricate axle joint in knuckle flange
- ⚡ Inspect free-running hub grease
- ⚡ Lubricate locks, hinges and hood latch
- ⚡ Inspect seat belts, buckles, retractors, anchors and adjuster
- ⚡ Inspect foot brake, parking brake and clutch



NISSAN PATROL

Time: 0.7 Hours



ENGINE MAINTENANCE (Diesel Engine)

- ⚙️ Replace engine oil
- ⚙️ Replace engine oil filter (Severe conditions only)
- ⚙️ Drain fuel filter
- ⚙️ Inspect Cyclone pre-air cleaner

ENGINE MAINTENANCE (Petrol Engine)

- ⚙️ Replace engine oil
- ⚙️ Replace engine oil filter
- ⚙️ Inspect Cyclone pre-air cleaner

CHASSIS AND BODY MAINTENANCE

- ⚙️ Inspect brake, clutch and steering gear fluid or oil
- ⚙️ Inspect brake, clutch and exhaust systems
- ⚙️ Inspect manual transmission gear oil
- ⚙️ Inspect automatic transmission fluid except TB48DE engine model
- ⚙️ Inspect transfer fluid and differential gear oil
- ⚙️ Inspect steering gear box and linkage, axle and suspension parts, propeller shaft and front drive shafts
- ⚙️ Inspect brake pads, rotors and other brake components
- ⚙️ Lubricate locks, hinges and hood latch (Severe conditions only)
- ⚙️ Inspect foot brake, parking brake and clutch



NISSAN PATROL

Time: 2.4 Hours



ENGINE MAINTENANCE (Diesel Engine)

- ⚙️ Inspect and adjust drive belts
- ⚙️ Adjust intake and exhaust valve clearances
- ⚙️ Replace engine oil
- ⚙️ Replace engine oil filter
- ⚙️ Inspect cooling system
- ⚙️ Replace fuel filter
- ⚙️ Replace air cleaner filter
- ⚙️ Inspect Cyclone pre-air cleaner
- ⚙️ Inspect injection nozzles (Severe conditions only)

ENGINE MAINTENANCE (Petrol Engine)

- ⚙️ Adjust intake and exhaust valve clearances
- ⚙️ Replace engine oil
- ⚙️ Replace engine oil filter
- ⚙️ Inspect cooling system
- ⚙️ Replace fuel filter
- ⚙️ Replace air cleaner filter
- ⚙️ Inspect Cyclone pre-air cleaner

CHASSIS AND BODY MAINTENANCE

- ⚙️ Inspect brake, clutch and steering gear fluid or oil >>

CHASSIS AND BODY MAINTENANCE

(CONTINUED)

- ⚙️ Replace brake fluid (Severe conditions only)
Inspect power steering fluid and lines
- ⚙️ Inspect brake, clutch and exhaust systems
- ⚙️ Replace manual transmission gear oil
- ⚙️ Inspect automatic transmission fluid except TB48DE engine model
- ⚙️ Inspect transfer fluid and differential gear oil
- ⚙️ Inspect steering gear box and linkage, axle and suspension parts, propeller shaft and front drive shafts
- ⚙️ Inspect steering damper
- ⚙️ Lubricate greasing points of propeller shafts
- ⚙️ Tighten body mountings
- ⚙️ Inspect wheel alignment
- ⚙️ Inspect brake pads, rotors and other brake components
- ⚙️ Inspect brake linings, drums and other brake components
- ⚙️ Inspect front wheel bearing grease
- ⚙️ Inspect free-running hub grease
- ⚙️ Lubricate locks, hinges and hood latch
- ⚙️ Inspect belts, buckles, retractors, anchors and adjuster
- ⚙️ Inspect foot brake, parking brake and clutch